

Since 1968

COMMAX
SmartHome & Security

User Manual

CIOT-L8TM



www.commax.com

COMMAX Co.,Ltd.












- Thank you for purchasing COMMAX products.
- Please carefully read this User's Guide (in particular, precautions for safety) before using a product and follow instructions to use a product exactly.
- The company is not responsible for any safety accidents caused by abnormal operation of the product.

Table of Contents

- Safety Warning & Caution2
- 1. CONFIGURATION4
- 2. Screen Setting5
 - 1.1. Initial Screen5
 - 2.1. Status Icon5
- 3. Guard Call6
- 4. Household Call7
 - 4.1. Call Among Household7
- 5. Entry Authorization9
 - 5.1. Entry with RF-Card9
 - 5.2. Entry with Password9
 - 5.3. Entry with Password In Case of off-Line 11
- 6. Registration of Smart E-Key & Door Open 12
 - 6.1. Registration of Smart E-Key 12
 - 6.2. Open the Door at the Lobby 13
- 7. Name Search 14
- 8. General Setting 14
 - Settings 14
 - How to use the Buttons 14
 - Menu of the Settings 15
- 9. Web settings 20
 - 9.1. System Info 21
 - 9.2. Network Info 22
 - 9.3. System Setting 23
 - 9.4. Initialize the Password 28
- 10. Wiring Diagram 29
- 11. Specifications 29











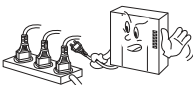


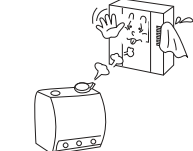


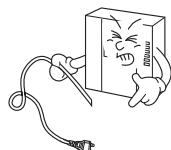
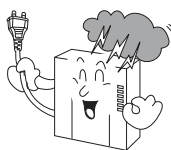









Safety Warning & Caution

Please follow the things described below in order to prevent any danger or property damage.

 <p>Warning It may cause a serious damage or injury if violated.</p>  <p>Caution It may cause a minor damage or injury if violated.</p>	 Prohibition.  No disassembly  No touch  Must follow strictly.  Shows plugging out the power cord without an exception  Shows the warning and caution for an electric shock.  Shows the warning and caution for a fire.
----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------	----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

Warning

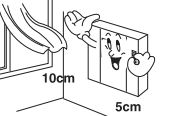Power & Installation

<p>Please don't use several products at the same time on one power socket.</p> <ul style="list-style-type: none"> It may cause a fire due to an abnormal overheating.  <div>   </div> <p>Prohibition Fire</p>	<p>Please don't bend the power cable excessively or it may cause an electric shock.</p> <ul style="list-style-type: none"> fire when using a damaged power cable.  <div>    </div> <p>Prohibition Electric shock Fire</p>	<p>Please don't handle the power cable with a wet hand.</p> <ul style="list-style-type: none"> It may cause an electric shock.  <div>   </div> <p>Prohibition Fire</p>	<p>Please plug out the power cable from the socket when not using it for a long period of time.</p> <ul style="list-style-type: none"> It may shorten the product lifespan or cause a fire.  <div>   </div> <p>Request Fire</p>
<p>Please don't install the product in the place where there is much oil, smoke or humidity.</p> <ul style="list-style-type: none"> It may cause an electric shock or fire.  <div>    </div> <p>Prohibition Electric shock Fire</p>	<p>Please don't install the product with the lightning and thunder.</p> <ul style="list-style-type: none"> It may cause an electric shock or fire.  <div>    </div> <p>Prohibition Electric shock Fire</p>	<p>Please don't use and connect this product with other products with different rated voltage</p> <ul style="list-style-type: none"> It may cause a disorder or fire.  <div>   </div> <p>Prohibition Fire</p>	<p>When installing the product that generates heat, please install the product away from the wall (10cm) for the ventilation.</p> <ul style="list-style-type: none"> It may cause a fire due to the increased internal temperature.  <div>   </div> <p>Prohibition Fire</p>

⚠ Warning

Cleaning & Use

Please don't disassemble, repair or rebuild this product arbitrarily (please contact the service center if a repair is needed).

- It may cause an electric shock or fire.



If an abnormal sound, burning smell or smoke is coming out of the product, please plug out the power cable and contact a service center.

- It may cause an electric shock or fire.



Please don't insert any metallic or burnable materials into the ventilation hole.

- It may cause an electric shock or fire.



Please use only the designated batteries for the products of using DC power.

- It may cause an electric shock or fire.




⚠ Caution

Power & Installation

Please plug the power cable firmly into the inner end

- It may cause a fire.

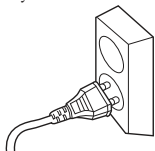

Please hold the plug tightly when unplugging the power cable (a part of the copper wire may be disconnected if the grabbing is only made on the cord when pulling out the cable).

- It may cause an electric shock or fire



When connecting the power cables after cutting the cable, please install the product with power off

- It may cause an electric shock or fire





When installing the product, please fix it firmly while using the wall-mounting unit and screws.

- It may cause an injury from the falling object.



Please be careful when using an AC circuit breaker since there is a possibility of an electric shock.

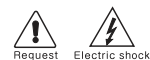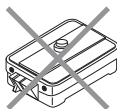


Please check the use voltage and current for the DC-only products and use the appropriate rectifier.

- It may cause a fire.




Please avoid direct rays of the sun or heating devices at a time of installation.

- It may cause a fire.

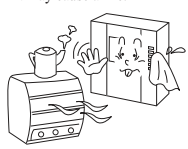

Please don't install the product on an unstable place or small support board.

- It may cause an injury if it falls down while in use.

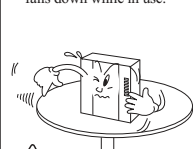


Cleaning & Use

When cleaning the product, please rub it with a soft and dry cloth after plugging out the power cable. (Please don't use any chemical products such as wax, benzene, alcohol or cleanser.)



Please don't drop the product on the ground and don't apply a shock.

- It may cause a failure.

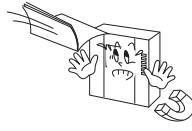


Please use the designated connection cable within the maximum calling distance designated for the product

- It may reduce the product performance.



1. CONFIGURATION

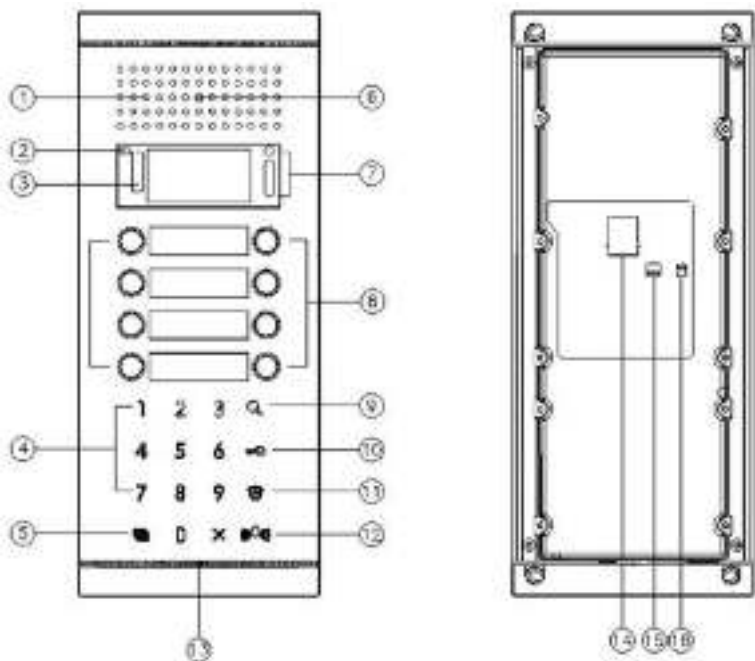

NO	NAME	NO	NAME
1	SPEAKER	10	ELECTRONIC KEY BUTTON
2	PROXIMITY SENSOR	11	GUARD CALL
3	RF CARD READER	12	CALL BUTTON
4	NUMERIC KEY BUTTON	13	MIC
5	PROGRAM BUTTON	14	LAN PORT
6	CAMERA	15	DOOR OPEN
7	LED	16	DC 14V
8	HOUSEHOLE CALL BUTTON		
9	NAME SEARCH BUTTON		

※ Proximity sensor


- OLED screen turns on automatically when a person approaches within a certain distance (1m).

※ Precautions for using proximity sensor

- If the outdoor temperature is below -20 °C, the proximity sensor may not operate.

2. Screen Setting

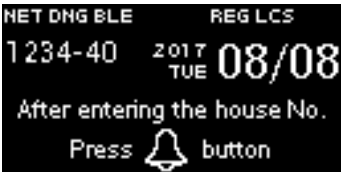

1.1. Initial Screen



2.1. Status Icon

Icon	Description	Icon	Description
NET	LAN Connectivity	REG	Connected to Server
OUT	OUT-Door Lobby Phone	SIP	Unconnected to Server
DNG	Building Lobby Phone	LCS	Local Server Connectivity
Dat	RF-Card Data Storage status		
BLE	BLE Connectivity Stats		

3. Guard Call

- ① Press  (Guard Station) Button
- ② Press  (Call) Button.
- ③ Call Guard Station with Ring Sound.
- ④ When Guard Answers the Call, Talk to Guard (Talk Time: 1Minute)
- ⑤ Press "X" Button If you Want to Hang up.
- ⑥ When Guard Press "Door Open" Button, Door Open with "Door Open" Sound
- ⑦ If you Listen to "beEP" Sound, It Means the Line is busy. so, Please Call Later.



PIC.1. Guard Call

※ You can Call the Guard Which Was Registered by Operator.

4. Household Call


4.1. Call Among Household

I. In Case Each Building No. is Registered :

Building No. Registered In Call Prefix




PIC.2. Household No. Registration Screen


- ① Enter Household No. In Keyboard.
Example) Household No. 101 → Entry 101
- ② Press  (Call) Button
- ③ Call the Household with Ring Sound.
- ④ When the Household Answers the Call, Talk to the Household (Talk Time: 1Minute)
- ⑤ Press "X" Button If you want to Hang up.
- ⑥ When Household Press "Door Open" Button, Door Open with "Door Open" Sound

II. In Case Building No. not Registered :

Building No. not Registered In Call Prefix

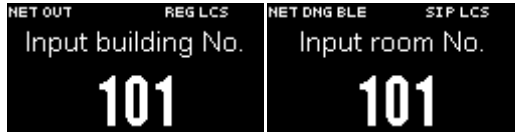

PIC.3. Building, Household No. Entry Screen

- ① Enter Building No. In Keyboard
Example) Building No. 101 → Enter "101"
- ② Enter Household No. In Keyboard.
Example) Household No. 101 → Enter "101"
- ③ Press  (Call) Button
- ④ Call the Household with Ring Sound.
- ⑤ When the Household Answers the Call, Talk to the Household (Talk Time: 1Minute)
- ⑥ Press "X" Button If you Want to Hang up.
- ⑦ When Household Press "Door Open" Button, Door Open with "Door Open" Sound

5. Entry Authorization

5.1. Entry with RF-Card

- ① Put RF-Card on card Reader.
- ② If Authorized, Door Open with "Door Open" Sound.
- ③ If Unauthorized, It Sounds a Dull Warning Sound.





PIC.4. Putting RF-card

5.2. Entry with Password

I. In Case Each Building No. Registered :

Building No. Registered In Call Prefix

- ① Enter Password In Keyboard.
- ② Press  (Key) Button.
- ③ Enter the Password of the Household No.
- ④ Press  (Call) Button.
- ⑤ If Authorized, Door Open with "Door Open" Sound.
- ⑥ If Unauthorized, It Sounds a Dull Warning Sound.

II. In Case Building No. not Registered :

Building No. not Registered In Call Prefix



- ① Enter Building No. In Keyboard
Example) Building No. 101 → Enter "101"
- ② Press 🔔(Call) Button.
- ③ Enter Household No. In Keyboard.
Example) Household No. 101 → Enter "101"
- ⑦ Press 🔑(Key) Button.
- ⑧ Enter the Password of the Household No.
- ⑨ Press 🔔(Call) Button.
- ⑩ If Authorized, Door Open with "Door Open" Sound.
- ⑪ If Unauthorized, It Sounds A Dull Warning Sound



PIC.5. Entering Password

5.3.Entry with Password In Case of off-Line

Condition (Not Connected to Local Server)

- ① Press  (Key) Button.
- ② Enter the Password.
- ③ Press  (Call) Button.

※ Under on-Line Condition (Connected to Local Server), This Function does not work.

※ Under on-Line Condition, User must Delete Password for off-Line Entry.

6. Registration of Smart E-Key & Door Open

6.1.Registration of Smart E-Key

- ① Memorize 'Gate name' Indicated In the Screen top of LobbyPhone. (EX: Gatename 0106-47)
- ② Input Gate name In 'Building/Lobby number'
- ③ Input the number of Household (EX: 101)
- ④ Input Password to Access to the Building (Password for a Wallpad)
- ⑤ Enter the Button 'Registration'



✗ Precautions

1. Do not use the numbers '1234, 4321, 0000' as a Password for Wall pad.
2. Do not use the number '9999' for Building/Household number
3. The Maximum Quantity of E-Key Registration is 7 Keys. need to remove former E-Key to ADD.

6.2. Open the Door at the Lobby.





- ① Press the Button 'Door Open' In GREEN Color.
- ② the Door is Open after two Seconds.




※ Precautions

- In Case of Change or Deletion of Lobby Password, Please Register E-Key once again.
- ※ BLE Module name set-up
 - BLE Module name will be Combined Call Prefix number with System ID.
(EX) Call Prefix : 106, System ID : 40
Gate (BLE Module name) : 0106-40
 - BLE Function is not Available with Outdoor Lobby Phone



7. Name Search

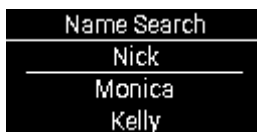- ① Press the Button  (Name Search).
- ② Input the name on the Keypad.
- ③ Select the name you are Looking for by using up  (Key) & down  (Guard) Buttons.
- ④ Press the Button  (Call) to Call the Household.










8. General Setting


Settings



- ① Press the Button .
- ② Input your Password..
- ③ Presee the Button  (Call)

※ For Network Security, Please Change the Password for the First use. ※

Initialization of the Password:  + "0000" +  +  +  +  +  

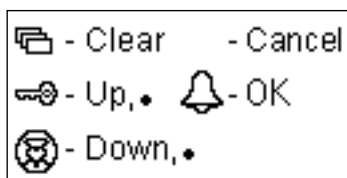How to use the Buttons



※When you Input the IP Address, use the Buttons  and  ". ".

Menu of the Settings

0: set Network+

- 0: IP Address (Input IP Address)
- 1: G/W Address (Input Gateway Address)
- 2: DNS Address (Input DNS Address)
- 3: NET Mask (Input Network Mask)

1: set VoIP+

- 0: SIP Server (Input SIP Server Address)
- 1: Guard ID (Input Guard ID)

2: Management+

- 0: Server Address (Input Local Server Address)
- 1: update Address (Input update Server Address)
- 2: System ID (Input Serial number of the Product)
- 3: Call Prefix (Setting Building number)
- * In Case of No Input Building number, Input Screen will Automatically Appease.

4: Call Line+

- 0: Min Call Line (Input Minimum Call Line)
- 1: Max Call Line (Input Maximum Call Line)

* Caution : If Min Call Line is Higher than Max Call Line, It's not Possible to Call.

5: Position (Setting the Installation Place of the Product)

※ use the Button  for Setting Aboveground and the Button  for belowground.

EX) Press the Button  to Indicate '1', the Button  to Indicate 'B1'.

※ If you Do not Input the Floor, the First Floor will be Automatically set.

※ In Case of Change of System ID and Call Prefix, BLE Module name will be Changed.

3: Audio/Video+

0: Audio+

- 0: General SPE. VOL. (Speaker Volume Control When Calling Household)
- 1: General MIC VOL. (Microphone Volume Control When Calling Household)
- 2: Guard SPE. VOL. (Speaker volume Control When Calling Guard)
- 3: Guard MIC VOL. (MICRO Phone Volume Control When Calling Guard)
- 4: General number Speech (Setting Voice Button of Building/Household numbers)
- 5: Key Sound (Setting Key Sound)
- 6: Ring Sound (Setting Ring Sound)
- 7. Key VOL. (Setting Key Volume)
- 8. Ring VOL. (Setting Ring Volume)
- 9: EFFECT VOL. (Setting Sound EFFECT Volume)
- 10: Initialization (Audio Initialization)

* all Settings In Audio Menu will be Initialization .

1: Video:+

- 0: Quality (Adjust Video Quality)
 - * Available to Adjust the Quality by 1M/2M/3M.
 - ※ Date size Increases In Higher Quality.
- 1: Resolution
 - * 480P(640*480)/720P(1280*720)/1080P(1920*1080)
- 2: Initialization (Video Initialization)

* all Settings In Video Menu will be Initialization .

4: EXTRA Config+

0: Language (Select Language)

1: Skin theme

0: auto

* It Automatically sets once a day When Boots up Skin theme.

1: FLIP Clock

- * Fix the Skin theme by FLIP Clock type.
- 2: RED Clock
- * Fix the Skin theme by RED Clock type.
- 3: GREEN Clock
- * Fix the Skin theme by GREEN Clock type.
- 4: BLACK Clock
- * Fix the Skin theme by BLACK Clock type.
- 2: set Time+
 - 0: Door Open Time
 - * 2, 5, 10, 15, 20, 25 SEC. Selection
 - 1: Sleep MODE Time
 - * 30 SEC., 1, 2, 3, 4, 5 Min. Selection
 - 2: Key Time OUT
 - * 10, 20, 30 SEC. Selection.
 - 3: use 24-HOUR format
 - * Select the type of Time (24Hours)
- 3: ADC Sensor
 - 0: Distance (Change the Range of Distance Measurement of ADC Sensor)
 - * In Case of exposed to Direct Sunlight, Distance will Shorten.
 - 0:[] 100CM
 - 1:[] 90CM
 - 2:[*] 80CM
 - 3:[] 70CM
 - 4:[] 60CM
 - 5:[] 50CM
 - 6:[] 40CM
 - 7:[] 30CM
 - 8:[] Unused
 - 1: Detection Hold Time
 - 0:[] 200MS
 - 1:[*] 300MS

2:[] 400MS

3:[] 500MS

4:[] 600MS

4: BLE Intensity

0:[] 1 step

1:[] 2 step

2:[] 3 step

3:[] 4 step

4:[*] 5 step

5:[] 6 step

6:[] 7 step

7:[] 8 step

5: Change PWD

* Please use the Button  to Change the Password.

6: off-Line PWD (Enter the Password to Open the Door When offline)

* Please use the Button  to Change the Password.

* Initial off-Line Password is 123456.

7: Reboot: (Operation System reboots)

8: System Reset (System is Reset to the Factory Settings)

* Changed IP is not Initialization .

5: Database+

0: Password down. (download Household Password)

1: RF-card down. (download RF-card Date)

2: Password DEL. (Delete Household Password)

3: RF-card DEL. (Delete RF-card Date)

6: System Info+

0: Version (software Version)

1: BOOT (BOOT LOADER Information)

2: KERNEL (OS Information)

7: Test+

0: Test Door Open

1: Test RF Card

* Check the number of RF-Card

* touch RF-Card to the RF-Card Reader

2: Test Elevator (TEST Calling Elevator)

3: ADC Sensor Test

4: Temp Sensor Test

* Check the Sensor In "DEFROSTER : on" MODE

5: Call Button Test

Call Button Test Reading... Panel : 0 Index : 1 Value : Unused	0 : Panel Index : 1 Setting Value "Unused"
Call Button Test Reading... Panel : 0 Index : 1 Value : 5678	0 : Panel Index : 1 Setting Household Calling "5678"
Call Button Test Reading... Panel : 0 Index : 8 Value : Guard	0 : Panel Index: 8 Setting Guard Calling

6: System Initialization

9. Web settings

It is Available to Access to the WEB System Inputting IP Address In Internet Browser.
(EX : <http://10.254.1.17/login.php>)



- ① Input the Password for the panel (Initial Password : 0000)
- ② Push the Button "login"

※ Computer and Lobby Phone should be Connected In the same Network.

9.1. System Info

9.1.1. Version Info

- Check the version of system

Name	Information
Product	1000000000
Version	1.0
File Code	1.0
Code	10000000000000000000
System	1.0
B.I. Module Name	10000000000000000000

9.1.2. Easy Setup

- Call Prefix : Input the number of the Building
 - * If you Do not Register the Building number, Date Input Screen will DISPLAY Automatically.
- System ID : Input Serial number of the Lobby Phone
- Guard ID : Input Guard ID

Name	Information	
Call Prefix	1000	Update
System ID	100	Update
Guard ID	1000000000	Update

Reboot

※ after Changing Call Prefix/System ID/Guard ID, Please Press the Button “update” of Each Item and Reboot the system.

9.2. Network Info

9.2.1. Network Info

- IP Address : Input IP Address
 - Subnet Mask : Input Subnet Mask
 - Gateway : Input Gateway Address
 - DNS : Input DNS Address
- * after Setting all Information, Please Reboot the system.

The screenshot shows the 'Network Info' configuration page in the COMMAX system. The page has a header with the COMMAX logo and 'ARMED NETWORK SYSTEM'. Below the header are three tabs: 'System Info', 'Network Info' (which is selected), and 'System Setting'. Under the 'Network Info' tab, there are three sub-tabs: 'Network Info', 'Server Info', and 'System Info'. The main content area is titled 'Network Information' and contains a table with four rows: 'IP', 'Subnet Mask', 'Gateway', and 'DNS'. Each row has input fields for the respective values and an 'Update' button.

Item	Information	
IP	192.168.1.17	<button>Update</button>
Subnet Mask	255.255.255.0	<button>Update</button>
Gateway	192.168.1.254	<button>Update</button>
DNS	192.168.1.1	<button>Update</button>

9.2.2. Server Info

- Local Server : Input Local Server Address
- SIP Server : Input SIP Server Address
- Update Server : Input update Server Address

The screenshot shows the 'Server Info' configuration page in the COMMAX system. The page has a header with the COMMAX logo and 'ARMED NETWORK SYSTEM'. Below the header are three tabs: 'System Info', 'Network Info' (which is selected), and 'System Setting'. Under the 'Network Info' tab, there are three sub-tabs: 'Network Info', 'Server Info' (which is selected), and 'System Info'. The main content area is titled 'Server Information' and contains a table with three rows: 'Local Server', 'SIP Server', and 'Update Server'. Each row has input fields for the respective values and an 'Update' button.

Item	Information	
Local Server	192.168.1.2	<button>Update</button>
SIP Server	192.168.1.2	<button>Update</button>
Update Server	192.168.1.2	<button>Update</button>

9.2.3. System Reboot


- push the Button "Reboot" for all Settings to be applied.



9.3. System Setting

9.3.1. Password

- Current Password
- New Password
- Re Password : Confirm new Password

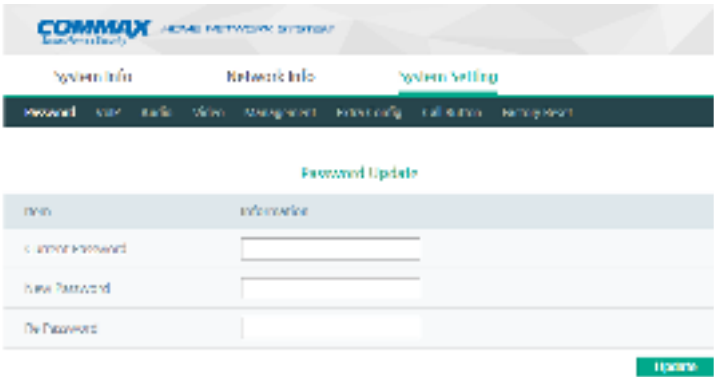

9.3.2. VoIP

- Guard ID : Input Guard ID

VoIP

Guard ID :	Info number :
<input type="text" value="00000000"/>	<input type="text" value="00000000"/>
<input type="button" value="Update"/>	

9.3.3. Audio

- General SPC Volume : Speaker Volume Control When Calling Household
- General MIC Volume : Microphone Volume Control When Calling Household
- Guard SPC Volume : Speaker Volume Control When Calling Guard
- Guard MIC Volume : Microphone Volume Control When Calling Guard
- Key Sound : Setting Key Sound
- Ring Sound : Setting Ring Sound
- Key Volume : Setting Key Volume
- Ring Volume : Setting Ring Volume
- Effect Volume : Setting Sound EFFECT Volume
- Number Speech : Setting Voice Button of Building/Household numbers

Audio

Item	Information	
General SPC Volume	25(40%)	<input type="button" value="Update"/>
General MIC Volume	25(40%)	<input type="button" value="Update"/>
Guard SPC Volume	25(40%)	<input type="button" value="Update"/>
Guard MIC Volume	25(40%)	<input type="button" value="Update"/>
Key Sound	Key 1	<input type="button" value="Update"/>
Ring Sound	1 (200 Hz)	<input type="button" value="Update"/>
Key Volume	11(14)	<input type="button" value="Update"/>
Ring Volume	11(14)	<input type="button" value="Update"/>
Effect Volume	7(14)	<input type="button" value="Update"/>
Number Speech	Low	<input type="button" value="Update"/>


9.3.4. Video

- Video Quality : Adjust Video Quality
 - * Available to Adjust the Quality by 1M/2M/3M
 - ※ Date size Increases In Higher Quality



9.3.5. Management

- Call Prefix : Setting Household number
- System ID : Input the Serial number of the Product
- Call Min Line : Input Minimum Call Line
- Call Max Line : Input Maximum Call Line
- BLE Intensity : Setting BLE Intensity
- Proximity Sensor Distance : Setting the Range of Distance Measurement of ADC Sensor
 - * In Case of exposed to Direct Sunlight, Distance will Shorten.
- Proximity Sensor Hold Type : Setting Detection Hold Time

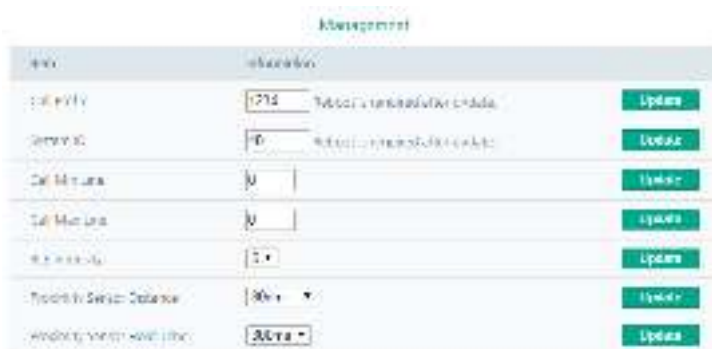

Item	Value	Update
Call Prefix	1212	Update
System ID	0	Update
Call Min Line	0	Update
Call Max Line	0	Update
BLE Intensity	1	Update
Proximity Sensor Distance	30cm	Update
Proximity Sensor Hold Type	30s	Update

9.3.6. Extra Config

- Language : Setting Language
- Door Open Time : Setting Time for Door Open
 - * 2, 5, 10, 15, 20, 25 SEC. Selection

- Sleep Mode Time : Setting Time of OLCD Sleep Mode
 - * 30 SEC., 1, 2, 3, 4, 5 Min. Selection
- Key Time Out
 - * 10, 20, 30 SEC. Selection
- Use 24-hour format : Select the type of Time (24Hours)
- Off-Line Password : Enter the Password to Open the Door When offline
 - * Initial off-Line Password is 123456

Extra Config

Item	Value/Unit	Buttons
Language	English	Update
Door Open Time	6 Sec	Update
Work mode (V)	30 Sec	Update
Key Timeout	10 Sec	Update
RM-01 Work mode	No	Update
Off-Line Password	123456	Update

9.3.7. Call Button

- Guard Setting : Available to set only one Button In the panel.
- Unused : not use the Button


IP-Panel Network Controller

System Info Network Info **System Setting**

Account SIP Audio Video Measurement Call Center **Call Button** Feature Panel

Call Button

Button	Call Number	Button	Call Number
Button 1	Guard 9999 <input type="checkbox"/> Unused	Button 7	Guard 9997 <input type="checkbox"/> Unused
Button 2	Guard 9998 <input type="checkbox"/> Unused	Button 8	Guard 9998 <input type="checkbox"/> Unused
Button 3	Guard 9999 <input type="checkbox"/> Unused	Button 9	Guard 9999 <input type="checkbox"/> Unused
Button 4	Guard 9999 <input type="checkbox"/> Unused	Button 0	Guard 9999 <input type="checkbox"/> Unused
Button 5	Guard 9999 <input type="checkbox"/> Unused	Button 9	Guard 9999 <input type="checkbox"/> Unused


Multi Panel 1

Button	Call Number	Button	Call Number
Button 1	9999 <input type="checkbox"/> Unused	Button 7	9999 <input type="checkbox"/> Unused
Button 2	9999 <input type="checkbox"/> Unused	Button 8	9999 <input type="checkbox"/> Unused
Button 3	9999 <input type="checkbox"/> Unused	Button 9	9999 <input type="checkbox"/> Unused
Button 4	9999 <input type="checkbox"/> Unused	Button 0	9999 <input type="checkbox"/> Unused
Button 5	9999 <input type="checkbox"/> Unused	Button 10	9999 <input type="checkbox"/> Unused
Button 6	9999 <input type="checkbox"/> Unused	Button 11	9999 <input type="checkbox"/> Unused
Button 7	9999 <input type="checkbox"/> Unused	Button 12	9999 <input type="checkbox"/> Unused
Button 8	9999 <input type="checkbox"/> Unused	Button 13	9999 <input type="checkbox"/> Unused
Button 9	9999 <input type="checkbox"/> Unused	Button 14	9999 <input type="checkbox"/> Unused
Button 10	9999 <input type="checkbox"/> Unused	Button 15	9999 <input type="checkbox"/> Unused
Button 11	9999 <input type="checkbox"/> Unused	Button 16	9999 <input type="checkbox"/> Unused
Button 12	9999 <input type="checkbox"/> Unused	Button 17	9999 <input type="checkbox"/> Unused
Button 13	9999 <input type="checkbox"/> Unused	Button 18	9999 <input type="checkbox"/> Unused
Button 14	9999 <input type="checkbox"/> Unused	Button 19	9999 <input type="checkbox"/> Unused
Button 15	9999 <input type="checkbox"/> Unused	Button 20	9999 <input type="checkbox"/> Unused
Button 16	9999 <input type="checkbox"/> Unused	Button 21	9999 <input type="checkbox"/> Unused
Button 17	9999 <input type="checkbox"/> Unused	Button 22	9999 <input type="checkbox"/> Unused
Button 18	9999 <input type="checkbox"/> Unused	Button 23	9999 <input type="checkbox"/> Unused
Button 19	9999 <input type="checkbox"/> Unused	Button 24	9999 <input type="checkbox"/> Unused
Button 20	9999 <input type="checkbox"/> Unused	Button 25	9999 <input type="checkbox"/> Unused

9.3.8. Factory Reset

- System is Reset to the Factory Settings

* Changed IP is not Initialization .

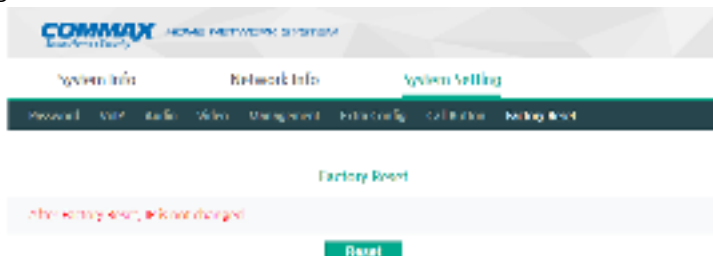

9.4. Initialize the Password

- Input "Lobby IP/key_event.php" Into the WEB BROWSER.


(EX : http://10.254.1.17/key_event.php)



※ Please Change the Initial Password(0000) for SAFETY.

※ How to Initialize : Prg + "0000" + Prg + Key + Guard + Prg + Bell

10.Wiring Diagram

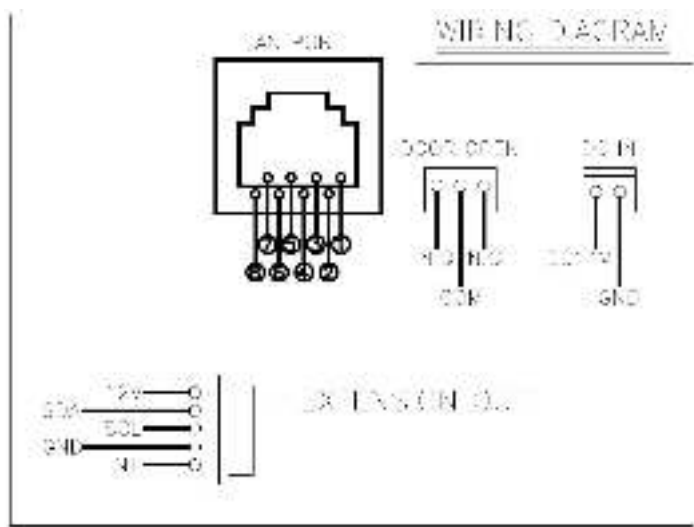

11. Specifications

Model name	스마트폰용 IP 카메라
Specification	
Transmission	TCP/IP
Voltage	DC14V/1.8A
Power Consumption	Max : 1.4A Standby :0.35A
Telecommunication	VoIP
Display	LCD
Video Format	H.264 / MPEG4
Camera Pixel	130만 화소
Call tone	Electric chime : 3 Melody 2 times
Temperature	Using : - 40° ~ 50 °



COMMAX Co.,Ltd.

513-11, Sangdaewon-dong, Jungwon-gu, Seongnam-si, Gyeonggi-do, Korea

Int'l Business Dept. Tel. : +82-31-7393-540~550 Fax. : +82-31-745-2133

Web site : www.commax.com

PM10703LCR10

Printed In Korea / 2016.03.104