HIKVISION



Network
Security Control Panel
Quick Start Guide




UD07393B

Wiring Powering On Testing Operation via Client Software

1

Step 1 Wiring

Connect the keypad, alarm output, trigger, and power cables, with following the figure below. Power down the control panel before connecting and disconnecting accessories and peripherals.

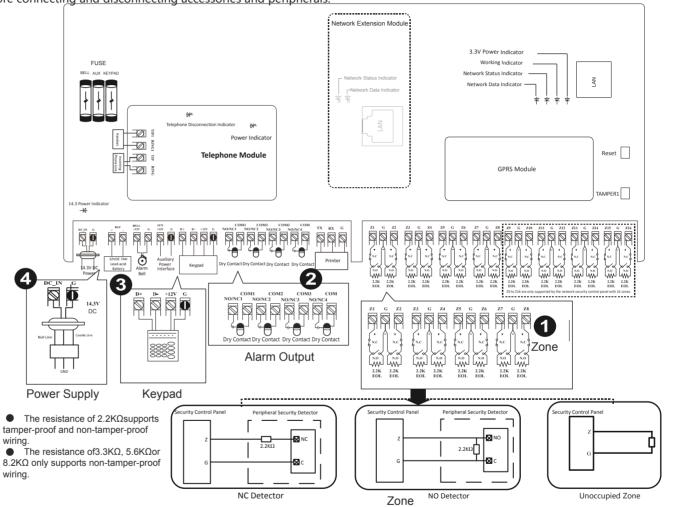

Step2 Powering On

The keypad registration will be completed in 1 minute after the control panel being power on. The system then will complete the start-up and enter the properly status of working in 20 seconds.

- While the registration is succeeded, the working status indicator of LED keypad will turn green
 - The display demonstration of LCD keypad after powering on is shown below.

HIKVISION

20XX.XX.XX XX:XX:XX VX.X.X build XXXXXX

Step3 Testing

Arm/Disarm

If the system is working properly, the arming/disarming operation will take effect.

Arming/Disarming Command: [User Password] + #

Enter the command above for disarming when the system is in the arming status.

2 Test

If the system is working properly, the keypad alarm will be occurred while triggering the zone.

The alarm Indicator are shown below.

LED Keypad : Channel indicator turns flicking red. LCD Keypad : Keypad screen display alarm

information.

Buzzer: Rapid beep sound. **Siren (Connected)**: Triggered.

Clear Alarm

Enter the command below to clear the triggered alarm.

[User Password] + [*] + [1] + [#]

4

Step4 Operation via Client Software

1 Activate Device

Path: Device Management -> Server -> Online

Note: You should activate the device for the first usage.

Add Device

Path: Device Management -> Server -> Add Device

Input the device nickname, IP address, user name, and password, and click *Add*.

Default Port No : 8000 Default Username : admin

For more, please refer to Security Control Panel Installation Guide.





Normally Used Keypad Operation Command

Function	Description	Command
Programming/	Control Panel	[Installer Password][*][0][#]
Editing Password	Programming	
	Exit Operation	[*][#]
	Operator Password	【Operator Password】【*】【0】【#】
		【User No. (3digits)】【#】
		【 New Password 】 【 # 】
		【New Password】【#】
Testing	Testing	<pre>【Password】【*】【6】【0】【#】</pre>
	Alarm Center Testing	[Password][*][6][1][#]
	Project Mode	<pre>[Password][Project][9][0][n][#]</pre>
	Exiting Project Mode	【Project】 or 【*】【#】
Arming/Disarming	Normal(Away)Arming	【Password】【#】
	/Disarming	
	Instant Arming	<pre>[Password] [*] [7] [#]</pre>
	Stay Arming	[Password][*][4][#]

Function	Description	Command
Clearing Alarm	Clearing Under	【Password】【*】【1】【#】
	arming status	
Bypass	Bypass Zone (n)	<pre>【Password】【Bypass】[n][n][n][#]</pre>
		<pre>Bypass \[\] \[\] \[\] \[\] nnn is the zone No. Restore Bypass:Enter Command Under the bypass Status Bypass \[\] \[\] \[\] \[\] \[\] \[\]</pre>
Keypad Settings	Enabling/Disabling	[*][5][1][#]
	Keypad Tone	
	Enabling/Disabling	[*][5][6][#]
	Fault Prompt	
	LCD Backlight Control	[*][5][2][n][n][n][#]
	LCD Backlight	[*][8][#]
	Disabling	

Quick Start Guide

COPYRIGHT ©2016 Hangzhou Hikvision Digital Technology Co., Ltd. ALL RIGHTS RESERVED.

Any and all information, including, among others, wordings, pictures, graphs are the properties of Hangzhou Hikvision Digital Technology Co., Ltd. or its subsidiaries (hereinafter referred to be "Hikvision"). This user manual (hereinafter referred to be "the Manual") cannot be reproduced, changed, translated, or distributed, partially or wholly, by any means, without the prior written permission of Hikvision. Unless otherwise stipulated, Hikvision does not make any warranties, guarantees or representations, express or implied, regarding to the Manual.

About this Manual

This manual is applicable to video security control panel.

The Manual includes instructions for using and managing the product. Pictures, charts, images and all other information hereinafter are for description and explanation only. The information contained in the Manual is subject to change, without notice, due to firmware updates or other reasons. Please find the latest version in the company website (http://overseas.hikvision.com/en/).

Please use this user manual under the guidance of professionals. Trademarks Acknowledgement

properties of Hikvision in various jurisdictions. Other trademarks and logos mentioned below are the properties of their respective owners. Legal Disclaimer

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, THE PRODUCT DESCRIBED, WITH ITS HARDWARE, SOFTWARE AND FIRMWARE, IS PROVIDED "AS IS", WITH ALL FAULTS AND ERRORS, AND HIKVISION MAKES NO WARRANTIES, EXPRESS OR IMPLIED, INCLUDING WITHOUT LIMITATION, MERCHANTABILITY, SATISFACTORY QUALITY, FITNESS FOR A PARTICULAR PURPOSE, AND NON-INFRINGEMENT OF THIRD PARTY. IN NO EVENT WILL HIKVISION, ITS DIRECTORS, OFFICERS, EMPLOYEES, OR AGENTS BE LIABLE TO YOU FOR ANY SPECIAL, CONSEQUENTIAL, INCIDENTAL, OR INDIRECT DAMAGES, INCLUDING, AMONG OTHERS, DAMAGES FOR LOSS OF BUSINESS PROFITS, BUSINESS INTERRUPTION, OR LOSS OF DATA OR DOCUMENTATION, IN CONNECTION WITH THE USE OF THIS PRODUCT, EVEN IF HIKVISION HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

REGARDING TO THE PRODUCT WITH INTERNET ACCESS, THE USE OF PRODUCT SHALL BE WHOLLY AT YOUR OWN RISKS. HIKVISION SHALL NOT TAKE ANY RESPONSIBILITES FOR ABNORMAL OPERATION, PRIVACY LEAKAGE OR OTHER DAMAGES RESULTING FROM CYBER ATTACK, HACKER ATTACK, VIRUS INSPECTION, OR OTHER INTERNET SECURITY RISKS; HOWEVER, HIKVISION WILL PROVIDE TIMELY TECHNICAL SUPPORT IF REQUIRED.

SURVEILLANCE LAWS VARY BY JURISDICTION. PLEASE CHECK ALL RELEVANT LAWS IN YOUR JURISDICTION BEFORE USING THIS PRODUCT IN ORDER TO ENSURE THAT YOUR USE CONFORMS THE APPLICABLE LAW. HIKVISION SHALL NOT BE LIABLE IN THE EVENT THAT THIS PRODUCT IS USED WITH ILLEGITIMATE PURPOSES. IN THE EVENT OF ANY CONFLICTS BETWEEN THIS MANUAL AND THE APPLICABLE LAW, THE LATER PREVAILS