

Operating With Imou App

Step 1

Scan the following QR code or search “Imou” in Google Play or App Store to download and install Imou App.



Step 2

Run Imou App, and then register an account for first use.

Step 3


Connect the camera to power source with the power adapter.

Step 4

Wait for booting to be finished, and then the camera indicator flashes with green light.

Step 5

Connect your smart phone to your Wi-Fi network, and make sure your smartphone is connected to Wi-Fi network with 2.4 GHz band, and then do the following operations to finish adding camera.

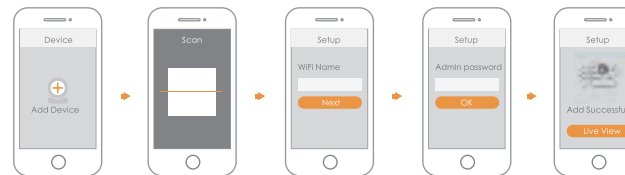


Note:

- If you have more than one camera, do step 5 to add them one by one.
- If the Wi-Fi network changed or the indicator status goes wrong, reset the camera, and then do step 5 to add it again.

Installing Camera

Note: Make sure the mounting surface is strong enough to hold at least three times of the device weight.

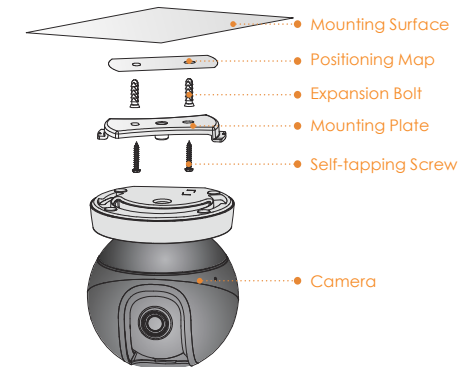


- Step1** Drill screw holes on the mounting surface as the mounting plate shows, and then put in the expansion bolts.
- Step2** Attach the mounting plate to the mounting surface with the self-tapping screws.
- Step3** Attach the camera to the mounting plate, then power it up, and then, adjust the lens to the ideal angle.



Quick Start Guide

Version 1.0.1

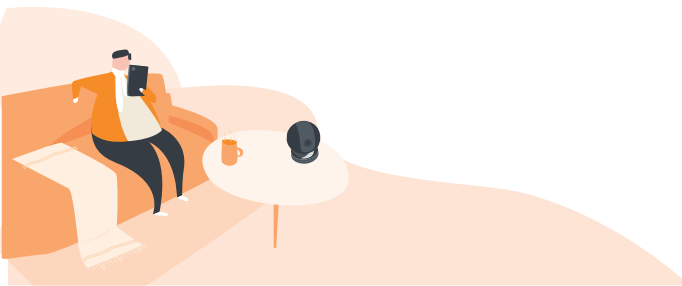

Packing List



Camera x 1



Power Cable x 1



 
Power Adapter x 1



QSG x 1



Screw Package x 1



Mounting Plate x 1



Positioning Map x 1


Camera Introduction



Lens



Built-in Mic

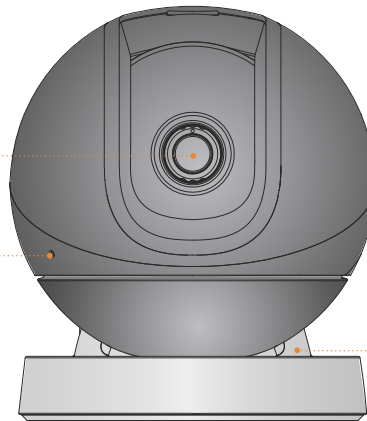

LED Indicator



Micro SD Card Slot



Power Port




Built-in Speaker



Ethernet Port



Reset/WPS Button

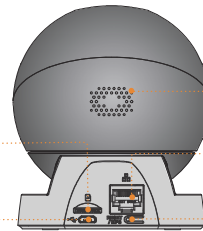

Note: Press the Reset/WPS button to enable WPS.
Press and hold the Reset/WPS button for 10 s to reset the camera.

The pattern of the LED indicator is included in the following table.

LED Indicator Status	Device Status
Off	<ul style="list-style-type: none">Powered off/LED turned offRebooting after reset
Red light on	<ul style="list-style-type: none">BootingDevice malfunction
Green light flashing	Waiting for network
Green light on	Operating properly
Red light flashing	Network connection failed
Green and Red light flashing alternately	Firmware updating