



User Manual

COMMONTALK INTERPHONE/ PAGING SYSTEM TP-6RC/12RC





www.commax.com

COMMAX Co.,Ltd.



- $\bullet\,$ Thank you for purchasing COMMAX products.
- Please carefully read this User's Guide (in particular, precautions for safety) before using a product and follow instructions to use a product exactly.
- The company is not responsible for any safety accidents caused by abnormal operation of the product.

Safety Warning & Caution

Please follow the things described below in order to prevent any danger or property damage.



Varnino

It may cause a serious damage or injury if violated.



Power & Installation

Caution

It may cause a minor damage or injury if violated.



Prohibition.



No disassembly



No touch



Must follow strictly.



Shows plugging out the power cord without an exception



Shows the warning and caution for an electric shock.



Shows the warning and caution for a fire.

Warning

Please don't use several products at the same time on one power socket.

· It may cause a fire due to an abnormal overheating.



Please don't bend the power cable excessively or it may cause an electric shock.


· fire when using a damaged power cable.





Please don't handle the power cable with a wet hand.

· It may cause an electric shock.






Please plug out the power cable from the socket when not using it for a long period of time.

· It may shorten the product lifespan or cause a fire.



Please don't install the product in the place where there is much oil, smoke or humidity.

· It may cause an electric shock or fire.




Please don't install the product with the lightening and thunder.

· It may cause an electric shock or fire.



Please don't use and connect this product with other products with different rated voltage

· It may cause a disorder or





When installing the product that generates heat, please install the product away from the wall (10cm) for the ventilation.

It may cause a fire due to the increased internal temperature.



COMMAX

Warning

Cleaning & Use

Please don't disassemble. repair or rebuild this product arbitrarily (please contact the service center if a repair is needed.

· It may cause an electric shock or fire.



If an abnormal sound, burning smell or smoke is coming out of the product, please plug out the power cable and contact a service center.

· It may cause an electric shock or fire.



Please don't insert any metallic or burnable materials into the ventilation hole.

· It may cause an electric shock or fire.



Please use only the designated batteries for the products of using DC power.


· It may cause an electric shock or fire.






Caution

Please plug the power cable firmly into the inner end



Please hold the plug tightly when unplugging the power cable (a part of the copper wire may be disconnected if the grabbing is only made on the cord when pulling out the

It may cause an electric shock or fire



When connecting the power cables after cutting the cable, please install the product with power off

It may cause an electric shock or fire



When installing the product, please fix it firmly while using the wall-mounting unit and screws

· It may cause an injury from the falling object.



Please be careful when using an AC circuit breaker since there is a possibility of an electric shock.



Please check the use voltage and current for the DC-only products and use the appropriate rectifier.



Please avoid direct rays of the sun or heating devices at a time of installation.

· It may cause a fire



Please don't install the product on an unstable place or small support board.

It may cause an injury if it falls down while in use.



When cleaning the product, please rub it with a soft and dry cloth after plugging out the power cable. (Please don' t use any chemical products such as wax, benzene, alcohol or cleanser.)



Please don't drop the product on the ground and don't apply a shock

It may cause a failure.



Please use the designated connection cable within the maximum calling distance designated for the product

· It may reduce the product performance.






Cleaning & Use


Power & Installation

CONTROLS AND FUNCTIONS

TP-nRC ROOMSTATION

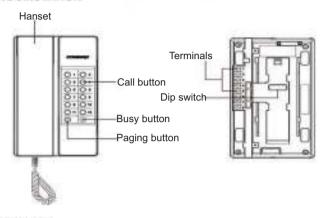

DR-DW2N DOORSTATION

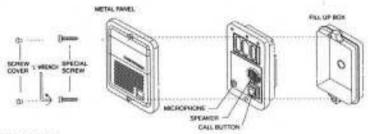

WIRING

This interphone is a simple wiring type and on all master and door entry system.

According to customer's requirement, it can be composed of various system such as a 4 common wire in parallel system.

External Paging Speaker (Optional)

A built-in amplifier in each interphone station permits the addition of an external speaker to any station located in an area where the ambient sound level may interfere with the ability to hear paging announcement and the call tone.

Doorstation(Optional)

The commax Model DR-DW2N is a door station unit of TP-nRC interphone system and electric door releaser can be used with this doorphone system.

Power Supply (Optional)

The commax Model RF-1A regulated power supply provides 12V::., 1A

A bracket is provided for mounting to a wall. A pilot lamp on the monitor illuminates when power has been applied.

BE SURE TO OBSERVE CORRECT POLARITY WIRING WHEN CONNECTING THE POWER SUPPLY TO THE JUNCTION TERMINAL.


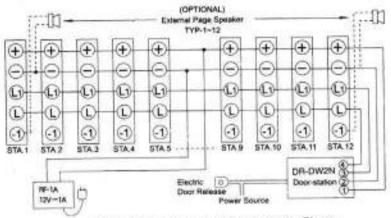


Figure-5 TP-nRC and DR-DW2N Connection Diagram

NOTE


- J if she cable run is very long, connect the power supply to a junction terminal mid-way throu the run.
- J One power supply(RF-1 A) is recommended for each six station in a system. (Require two power supply(RF-1A) for more 7 stations of TP-nRC)

FIXING A PIN OF STATION NUMBER



The switch, its can be adjusted station number's on bottom side, has each interphone(TPnRC) which switch consist of 6 positions. 2 position of right side is adjusted paging and calling volume TP-nRC 4 position of left side is adjusted stations number of cach interphone(TP-nRC)

EXEMPLE



■ INSTALLATION

Each TP-nRC Interphone has a bracket to facilitate wall-mounted installation. Secure the bracket to the wall with screws provided. Fit the slots in the interphone base over the hooks on the bracket and pull the interphone down slightly to secure.

OPERATION INSTRUCTION

CALLING ANOTHER STATION

- Lift the handset and press the call button for the desired station.
 - A tremolo call tone will sound at the station called.
- 2. You can hear a faint calling tone from your receiver.
- 3. To make a conference call, simultaneously press the desired call buttons.
- 4. When you have completed your call, replace the handset.
- RECEIVING A CALL
- 1. When the call tone sounds, lift the handset and reply.
- 2. Replace the handset when finished.

NOTE Calling sound can be adjusted by calling switch(Figure-6)

* ALL-CALL PAGING

- Lift the handset and press and hold the paging button corresponding to the station you are using, speak into the handset
 - NOTE If not necessary the paging function, adjust the paging switch to "OFF" position (Figure-6)
 - * INTERPHONE DOORPHONE COMMUNICATION
- Visitors press the call button on doorstation (DR-DW2N): then they listen to the chime sound with two tone from roomstation (TP-nRC)
 - NOTE:1)Not calling sound at roomstation, if adjusted to "OFF" position in paging switch.
 - 2)Pick up the handset within 12-15 seconds for talking.
 - 3)When you are talking between interphones, you can hear faint calling sound from the doorstation through receiver.
- 2. Pick up the handset of roomstation and talk to the visitor.
- Without pushing the call button, you can talk to the other party and can also maintain the conversation away from 30Cm.
- After ascertainment of the visitor, the door opens by press the No 1 button on the roomstation.

SPECIFICATION

Power source · · · · · · · · · · · · · · · · · · ·	12V=
Current consumption	200mA
Effective distance	500M/0.65mm
wiring	-4common wires



www.safemag.ru



COMMAX Co.,Ltd.

513-11, Sangdaewon-dong, Jungwon-gu, Seongnam-si, Gyeonggi-do, Korea Int'l Business Dept. Tel.: +82-31-7393-540~550 Fax.: +82-31-745-2133

Web site: www.commax.com

Printed In Korea / 2011.04.104